

NXT 5 Quick Start Guide



READ THIS

Read this guide before using your system. Failure to follow these directions voids all warranties.

View the quick start video:
www.abcwindowssupply.com/nxt5quickstart

Starting Out

When you first get started, this is how your cart will look. The rest of this guide will explain getting from here to cleaning windows.



Attach Handle

Using tools (not included) tighten nut on to handle bolt.

RO Bypass

Insert the tubing into the 1/4" fitting on the cartridges marked RO. The output end of the Bypass Hose can be run wherever you find best.




Source Hose

Connect your water source to the garden hose fitting on your Carbon/Sediment filter.



Pole

Connect your pole using the quick connect/shut off valve provided with your system. Make sure the shut off valve is in the on position.

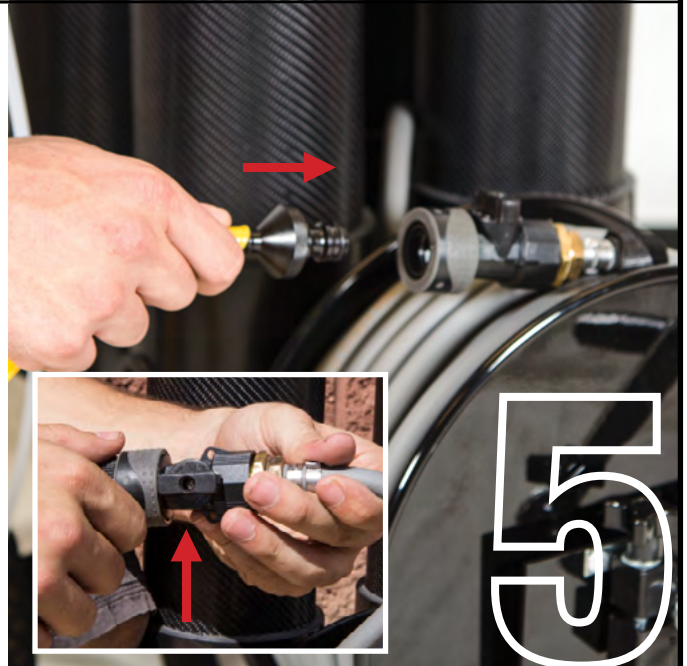

Turn On Water

Close your bypass valve until only a trickle is coming out.

Note: at least some water must be coming out of the bypass hose at all times while in use.



Plug In

Plug in your cart.

Note: only follow this step if you are planning on using the pump.



Pressure Gauge

Your NXT 5 comes with a pressure gauge mounted on top of the pump.

Note: an initial tap pressure of 50 psi should be present before running the pump to ensure the pump doesn't run dry.



Turn On Pump

Turn on the pump by pushing the on switch.

Note: ensure water is flowing through the system before turning on the pump to avoid damaging your pump.



Pump


Check that operating pressure is between 100-130 psi.

Note: running your system in excess of 130 psi will result in damage to your filters.

Adjust Pressure

You can adjust the pressure in two ways:

1. Opening and closing the bypass valve will lower and raise the system pressure.
2. The pump pressure can be controlled by tightening and loosening the screw on the bottom of the pump.

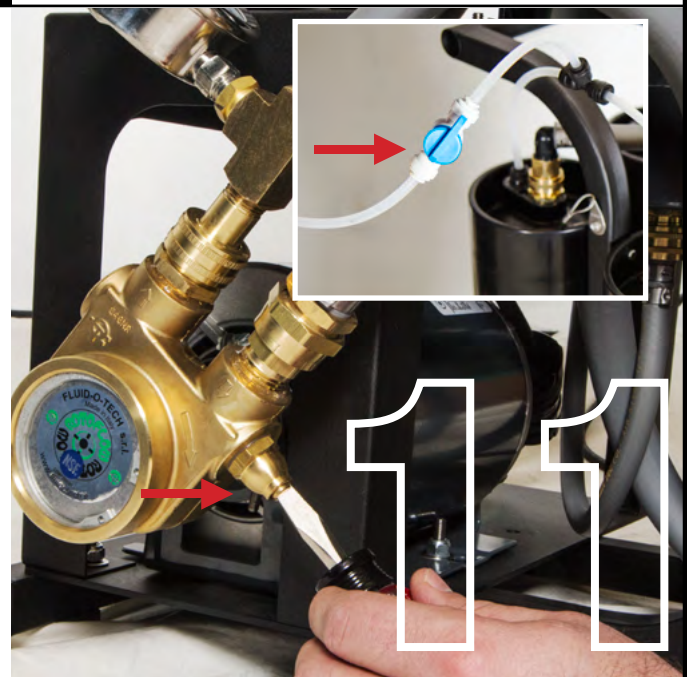



Clean Windows

Enjoy your NXT system!

Shut Down Procedure

When you are done using your system, fully open the *bypass valve* and close the *shut off valve*. This will flush your RO membranes prolonging their life.

Do This for 1-2 minutes.
Turn off pump (if used).

Turn off Water.

