

#### **READ THIS**

Read this guide before using your system. Failure to follow these directions voids all warranties.

View the quick start video: www.abcwindowsupply.com/soloquickstart

# **Starting Out**

When you first get started, this is how your cart will look. The rest of this guide will explain getting from here to cleaning windows.






# **Attach Bypass**

Attach the bypass hose assembly to the male brass bypass fitting on the output side.

### **Quick Connect**

Screw the quick connect with shut off to the system outlet.



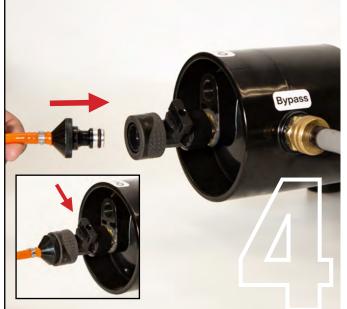

## **Insert Pole Tubing**

Turn Quick Connect valve to off.

Plug in pole tubing to Quick Connect.

Open valve on Quick Connect.

# Attach Source Hose

Connect source hose to system inlet.





#### **Turn On Water**

Close your bypass valve completely.

(Note: see manual for more detailed instruction on bypass operation.)

At least some water will be coming out at all times while in use.

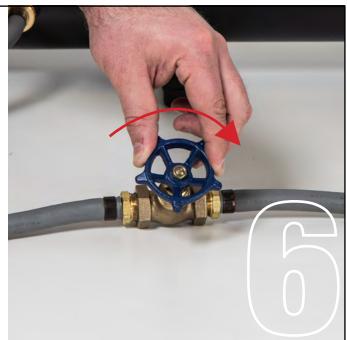

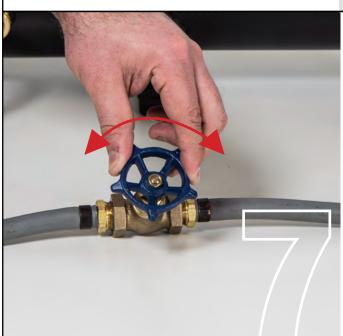

## **Adjust Bypass**

Open the RO bypass to fully open position.


Place open end of bypass hose so that water flows to a desirable location. Weigh down end if necessary.

Turn on source water.

#### **Clean Windows**

Enjoy your Solo System!



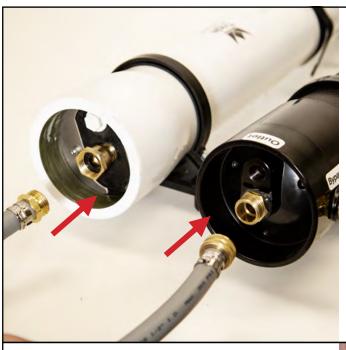


# **Optional**

If your source water is over 200 TDS, or your output is over 10 TDS, add a DI filter such as the Rover. We recommend using 1/2" hose.

#### **Shut Down Procedure 1**

- 1. Shut off flow of pure water to brush.
- 2. Fully open bypass. Allow bypass to flush the system out for 3–5 minutes.

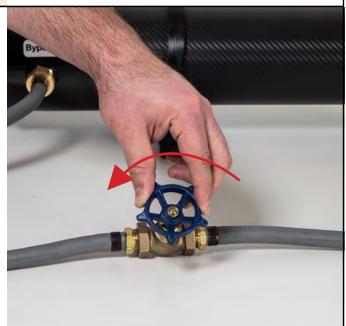



#### **Shut Down Procedure 2**

Disconnect source hose and pole tubing.

Tip the system with inlet side up and allow water to drain out of the bypass.

Shut quick connect and attach the outlet of the bypass to the system inlet for water tight transport.