

## **READ THIS**

Read this guide before using your system. Failure to follow these directions voids all warranties.

View the quick start video: www.abcwindowsupply.com/SG1QS

# **Starting Out**

When you first get started, this is how your cart will look. The rest of this guide will explain getting from here to cleaning windows.





### **Connect Filters**


Connect the Carbon filter to the RO filter with the included hose.

### **Source Hose**

Disconnect black bypass hose from bottom of Carbon/Sediment filter.

Connect your water source to the garden hose fitting on your Carbon/Sediment filter.



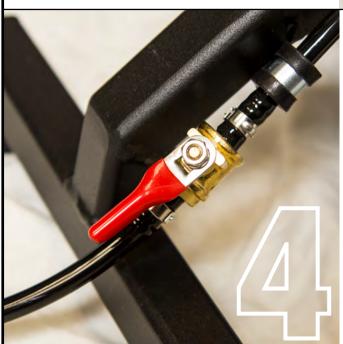

# **Open Bypass**

Fully open bypass hose. (Note: the valve should be positioned as pictured).

# **Wye Valve**


Check the brass wye valve located on the bottom of the RO filter. The valves should be positioned as pictured.



#### **Pole**

Attach Quick Connect Valve to output of DI filter.

Connect your pole using the quick connect/shut off valve provided with your system. Make sure the shut off valve is in the open position.

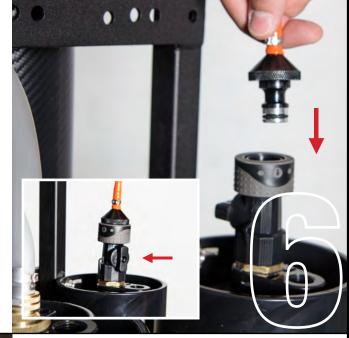

## **Turn On Water**

Reduce bypass water using valve to desired discharge.

1:1 ratio of discharge to output is optimal.

At least some water must be coming out at all times while in use.

## **Clean Windows**

Enjoy your SG1 system!

