

#### **READ THIS**

Read this guide before using your system. Failure to follow these directions voids all warranties.

View the quick start video: www.abcwindowsupply.com/roverquickstart

# **Starting Out**

When you first get started, this is how your cart will look. The rest of this guide will explain getting from here to cleaning windows.






# Attach Source Water

Attach source water to system inlet.

# **Quick Connect**

Screw the quick connect with shut off to the other end of the DI cartridge.



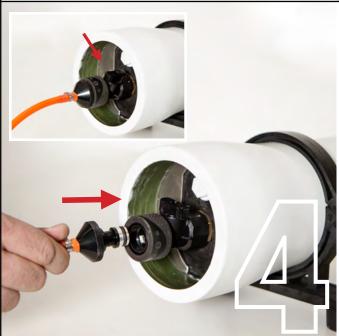

#### **Pole**

Turn Quick Connect Valve to off.

Plug in pole tubing to Quick connect.

Open valve on Quick Connect.

Turn on water.

### **Clean Windows**

Enjoy your Rover system!

